




INSTRUCTION MANUAL

Multi Purpose Hand Blender

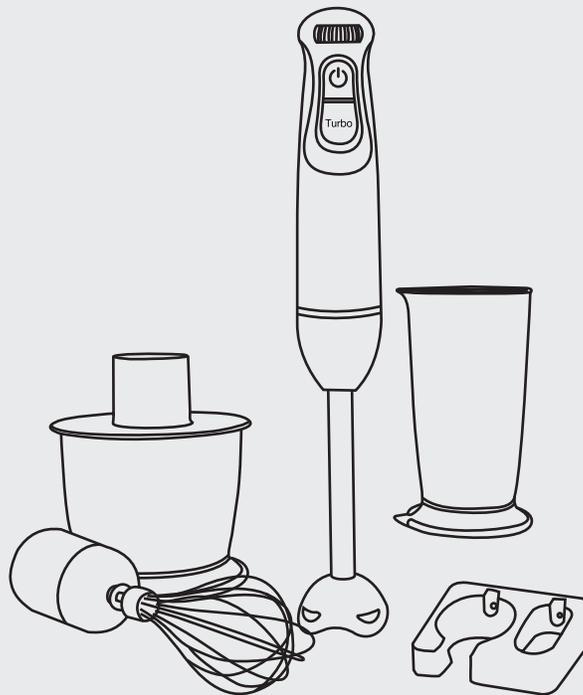

MODEL: HB1920

Read this booklet thoroughly before using and save it for future reference.

IMPORTANT SAFEGUARDS


Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet correspond to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;
6. Do not let cord hang over edge of table or hot surface.
7. Do not immerse upper part of blender into water as this would give rise to electric shock.
8. Close supervision is necessary when your appliance is being used near children or infirm persons.
9. Avoid contacting moving parts.
10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
11. The appliance cannot be used for chopping ice or blending hard and dry substance, otherwise the blade could be blunted.
12. To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.
13. Be sure chopper lid is securely locked in place before operating appliance.
14. The use of accessory not recommended by the manufacturer may cause injuries to persons.
15. Do not operate the appliance for other than its intended use.


16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
17. Do not use outdoors.
18. Save these instructions.
19. Take care of potential injury from misuse.
20. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
21. Do not allow children to use the blender without supervision.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

HOUSEHOLD USE ONLY


KNOW YOUR BLENDER (It is Suitable for Blending Vegetable and Fruit)

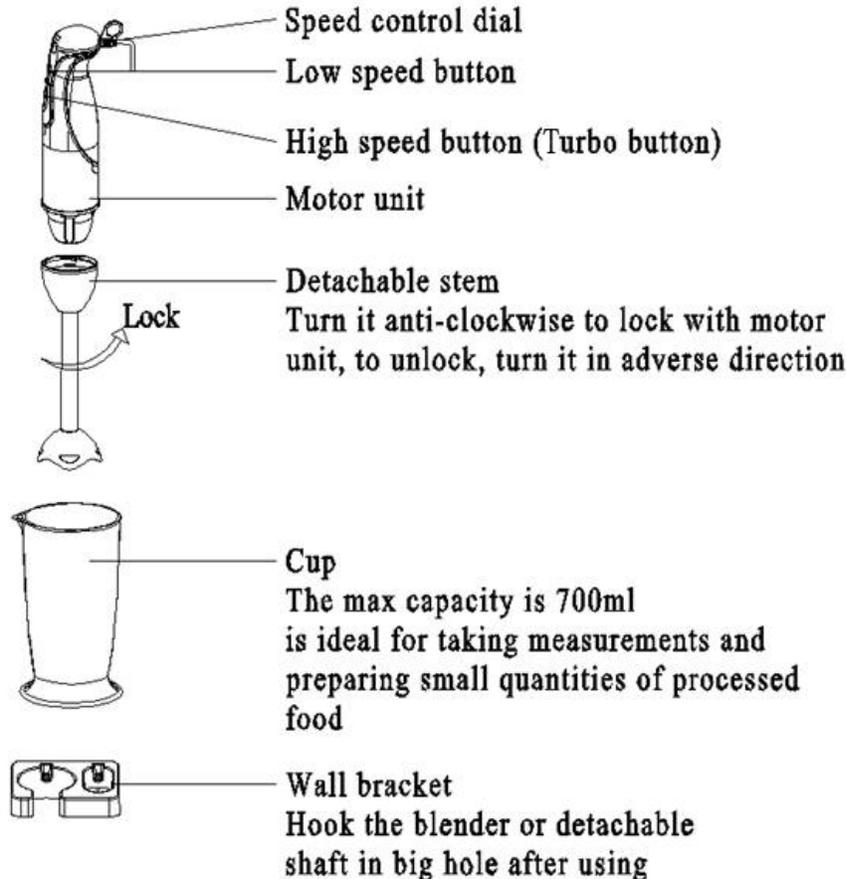

KNOW YOUR ACCESSORY-CHOPPER (Using for Chopping Meat)

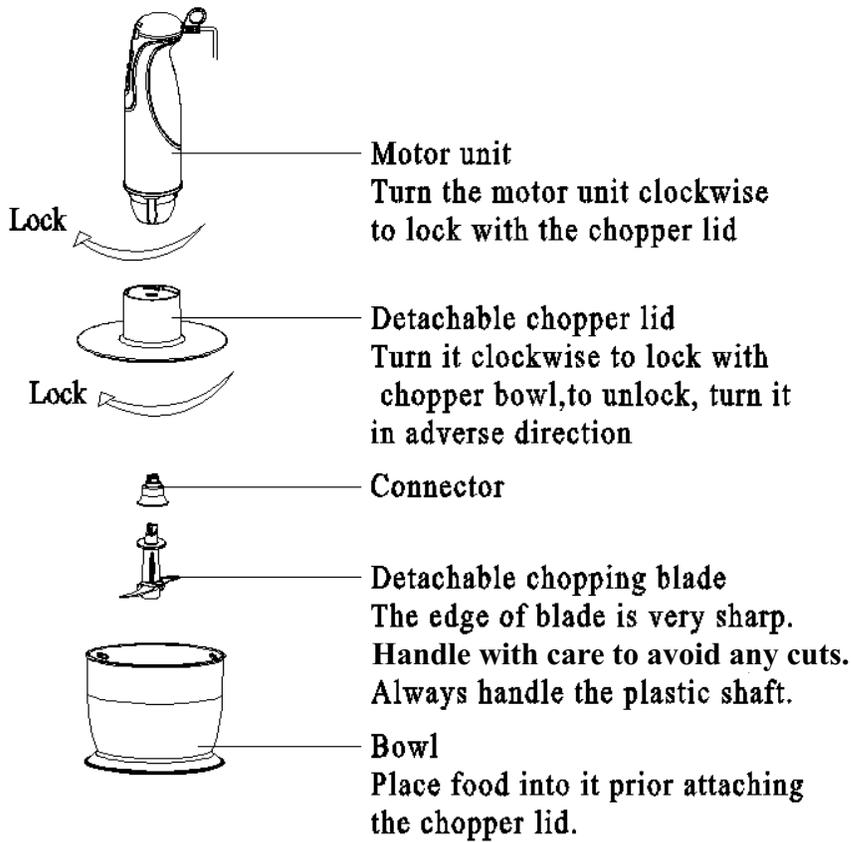

KNOW YOUR ACCESSORY-BEATER (For Mixing Egg White)

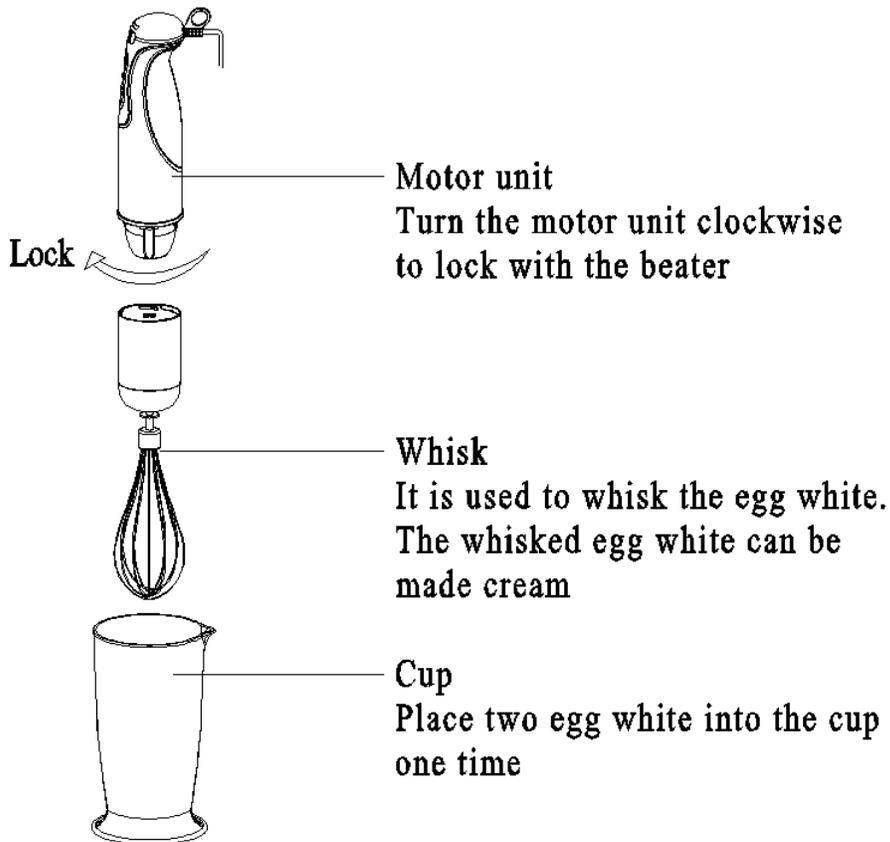

USING YOUR BLENDER

Before the first use, clean the blender according to the section of “quick cleaning”.

The time running unit without load can't exceed 15s.

Important: Blades are very sharp, handle with care. Ensure that the hand-held blender is unplugged from the power outlet before assembling or removing attachments.

INSTRUCTION FOR BLENDER

Max operation duration per time cannot exceed 1 minute, and 3 minute rest time must be maintained at two consecutive cycles.

1. To assemble the detachable shaft with the motor unit, turn the shaft anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.
2. Simply plug the hand-held blender to power outlet.
3. Lower the hand-held blender into food. Then press and hold the low speed button to start operating. At the same time you can select desired speed setting by dialing the speed control dial, the speed will be higher gradually when you dial the speed control dial from left to right.
4. You also can start operating by pressing and hold the high speed button (turbo button), the appliance will operate at the highest speed all the time. The speed will not change even if you dial the speed control dial.
5. To stop the hand-held blender by releasing the low speed button or high speed button.

INSTRUCTION FOR CHOPPER

Max operation duration per time cannot exceed 1 minute, and 3 minute rest time must be maintained at two consecutive cycles.

1. Place the chopper bowl on a clean, level surface.
2. Assemble the stainless chopping blade into the chopper bowl, as shown in Fig.1.

3. Place food into the chopper bowl.

Note: Remove the bone of the meat, cut small piece, then place the meat into bowl, the max quantity of meat can't exceed 200g in every blending.

4. Attach the lid onto the chopper bowl, make sure the tuber on the inside wall of bowl aligns with the groove of lid, then put down the lid and turn it in clockwise direction until it locks into position. (See Fig.2) To detach the lid, turn in adverse direction.

5. Insert the motor unit into the hole of the chopper lid, and turn in clockwise direction to lock. (See Fig.3)

6. Plug the appliance to power outlet. Then press and hold the low speed button to start operating. At the same time you can select desired speed setting by dialing the speed control dial, the speed will be higher gradually when you dial the speed control dial from left to right.

7. You can also start operating by pressing and hold the high speed button (turbo button), the appliance will operate at the highest speed all the time. The speed will not change even if you dial the speed control dial.

8. To stop the appliance by releasing the low speed button or high speed button of the motor unit.

9. After finishing chopping, unplug the power outlet firstly, then remove the motor unit from the chopper lid by turning it in anti-clockwise.


10. Open the chopper lid by turning it in anti-clockwise and remove the chopped food.

CAUTION:

- To reduce the risk of injury, never place cutting blade on base without first putting bowl properly in place.

- Be sure chopper lid is securely locked in place before operating appliance.

- After chopping, for safety, you shall disassemble the motor unit from the chopper lid firstly, then remove the chopper lid. Never remove the chopper lid with the motor unit in place.

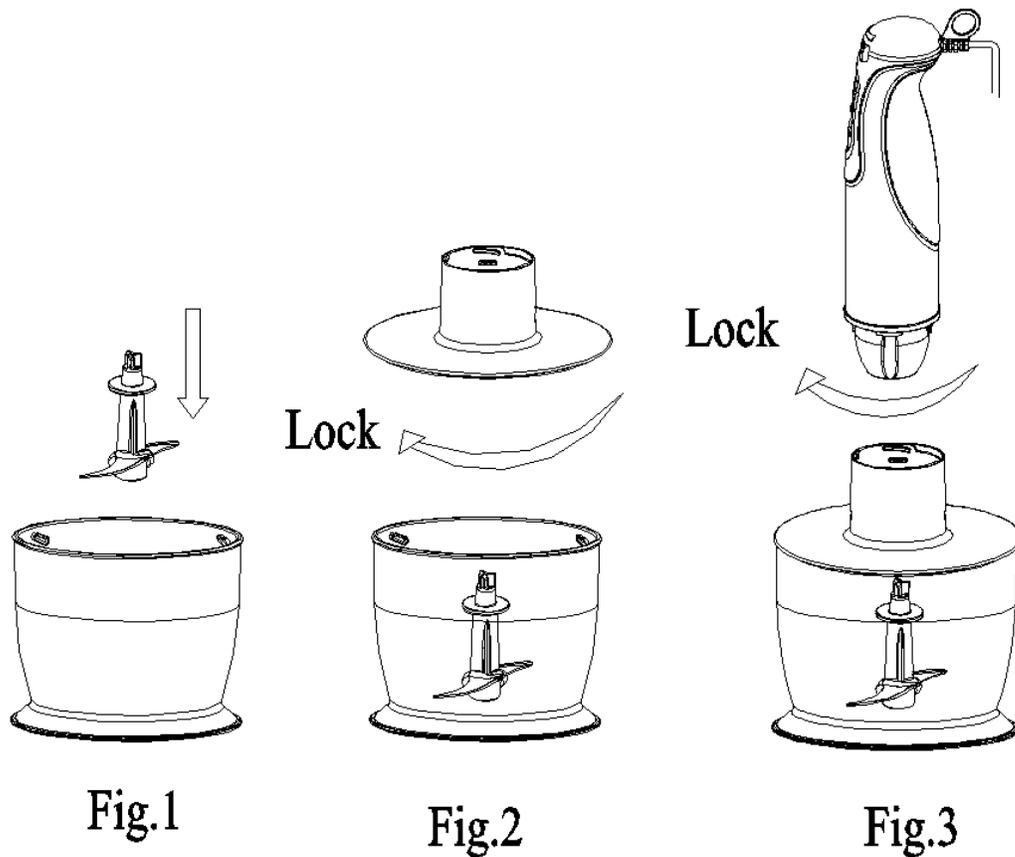

INSTRUCTION FOR EGG WHITE BEATER

Max operation duration per time cannot exceed 1 minute, and 3 minute rest time must be maintained at two consecutive cycles.

1. To assemble the egg white beater with the motor unit, turn the whisk anti-clockwise direction until tightened. To disassemble, just turn in the adverse direction.
2. Simply plug the hand-held blender to power outlet.
3. Place egg white into the cup, generally, two eggs white is enough.
4. Lower the hand-held blender into food. Then press and hold the low speed button to start operating. At the same time you can select desired speed setting by dialing the speed control dial, the speed will be higher gradually when you dial the speed control dial from left to right.
5. You also can start operating by pressing and hold the high speed button (turbo button), the appliance will operate at the highest speed all the time. The speed will not change even if you dial the speed control dial.

6. To stop the hand-held blender by releasing the low speed button or high speed button of the motor unit.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the detachable stem.

Note: Do not immerse the detachable stem of the blender in water because overtime the lubrication on the bearings may wash away.

2. Wash the detachable stem under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable stem, place it upright so that any water which may have got in, can drain out. The stem is dishwashing safe component.
3. Wash the cup, bowl, beater and blade in warm soapy water. The bowl and the beater are not recommended to place in dishwashing machine as the plastic component deteriorates through prolonged use of dishwasher cleaning.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as a electric shock may occur.
5. Dry thoroughly.
Caution: Blades are very sharp, handle with care.
6. Reassemble the blender shaft to motor unit then place it upright in wall bracket (see Fig.4) or hang it up for saving space.

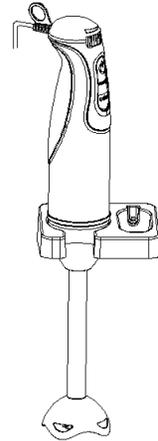


Fig.4

QUICK CLEANING

Between processing tasks, hold the hand-held blender in the cup half filled with water and turn on for a few seconds.

Fixing wall bracket

You can fix the wall bracket as following:

1. Drill two same holes in wall and strictly follow the

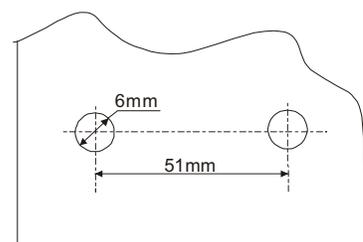


Fig. 5

dimension as indicated in the fig.5.

2. Knock two plastic tubes in them with hammer.
3. Secure the bracket on wall with another two screws.

Environment friendly disposal



You can help protect the environment!

Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal centre.